



# Kodak EasyShare C195 Batteries Replacement

How to replace AA batteries

Written By: Alyssa



## INTRODUCTION

The guide will show you how to remove and replace the batteries in your camera.


---



### PARTS:

- [AA Batteries](#) (2)
-

## Step 1 — Batteries

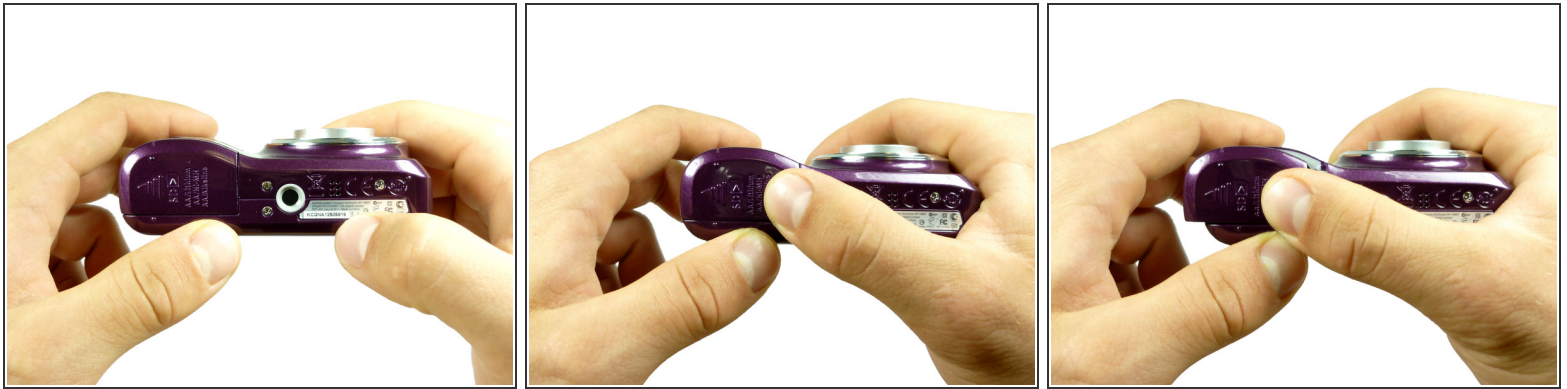

- First, open the cover to the batteries. This is located on the bottom left of the camera.
- Push the door down and to the left to open. This opens into the batteries and the memory card.

## Step 2



- To insert the batteries, place them in the slots provided.
- ⓘ Make sure the positive and negative signs match with the positive and negative sides of the batteries.

## Step 3



- When finished, you should have one battery positive side up and the other one negative side up.

To close the door, push the door down and slide to the right

This document was last generated on 2017-06-24 03:27:33 PM.